 




Quick Start Guide

LED Indication

A

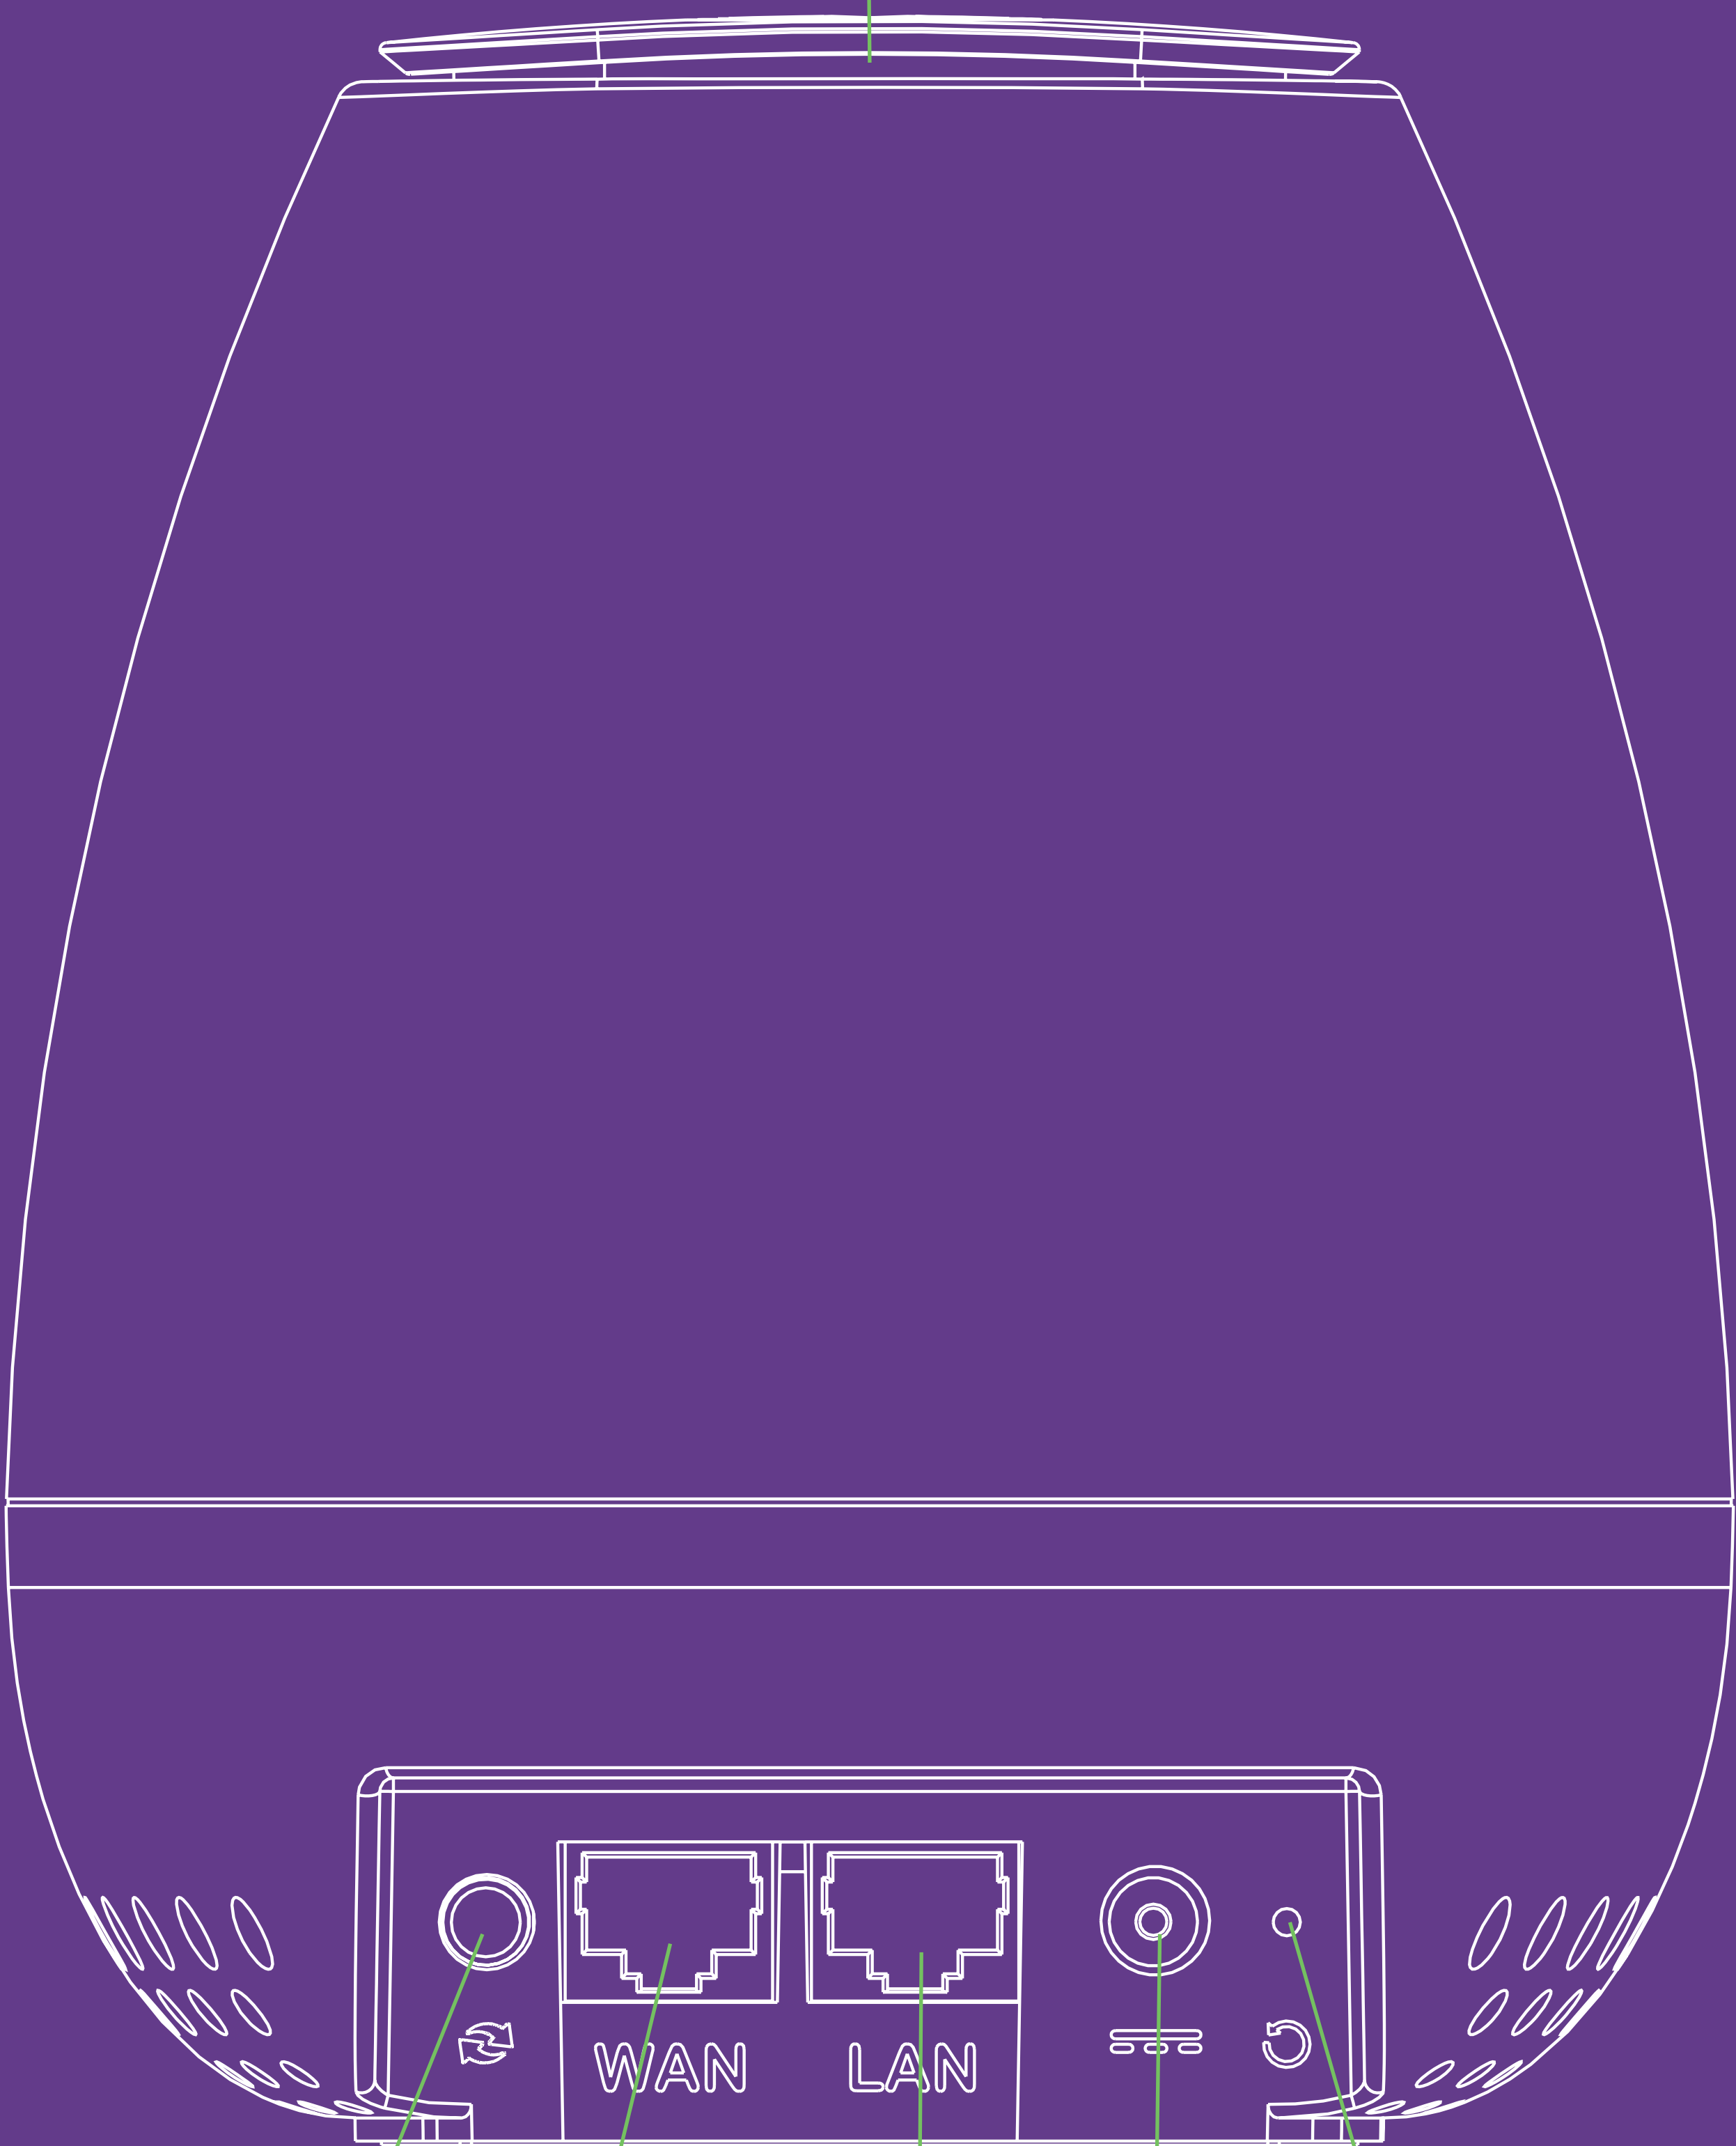

WAN Port 2.5 Gbps

DC Adapter Point

F

D

B

WPS/Sync Button

LAN Port 1 Gbps

Reset Button

What's in the box

Depending on pack size



Home Mesh Router
(Qty 1, 2, 3 or 5)



Power Adaptor
(Varies by Region)
(Qty 1, 2, 3 or 5)



Ethernet Cable
(Qty 1)

Safety Precautions



Keep device
away from high
temperature



Away from high
voltage cables



Disconnect before
cleaning





















Avoid damp cloth
for wiping




Don't disassemble
the router

LED Indications

On Controller		
INDICATORS	STATE	USER ACTION
 Off	Device is off.	Connect the Power Cable.
 Blinking	Initialization in progress	No action required
 Solid	Initialization completed / Connecting to internet	Check WAN cable / Configure WAN settings correctly or else contact your ISP
 Solid	Stable WAN link. Operating in Standalone mode.	No action required
 Blinking	Unstable WAN link Operating in Standalone mode	If problem persists contact your ISP
 Solid	Stable WAN link. Operating in Cloud mode	No action required
 Blinking	Unstable WAN link. Operating in Cloud mode	If problem persists contact your ISP
 Solid	Error State	Power down and power up the unit. OR factory reset the unit. OR raise a support ticket
 Blinking	Software upgrade in progress	Do not reboot!


On Satellite		
INDICATORS	STATE	USER ACTION
 Off	Device is off.	Connect the Power Cable.
 Blinking	Initialization in progress	No action required
 Solid	Initialization completed / Connecting to internet	Use Weave app to setup mesh
 Solid	Stable Mesh link	No action required
 Blinking	Unstable Mesh link	Place this satellite closer to the Controller and re-establish mesh link
 Solid	Stable WAN link. Operating in Cloud mode	No action required
 Blinking	Unstable Mesh link. Operating in Cloud mode	Place this satellite closer to the Controller and re-establish mesh link
 Solid	Error State	Power down and power up the unit. OR factory reset the unit. OR raise a support ticket.
 Blinking	Software upgrade in progress	Do not reboot!

Set-up in 3 easy steps

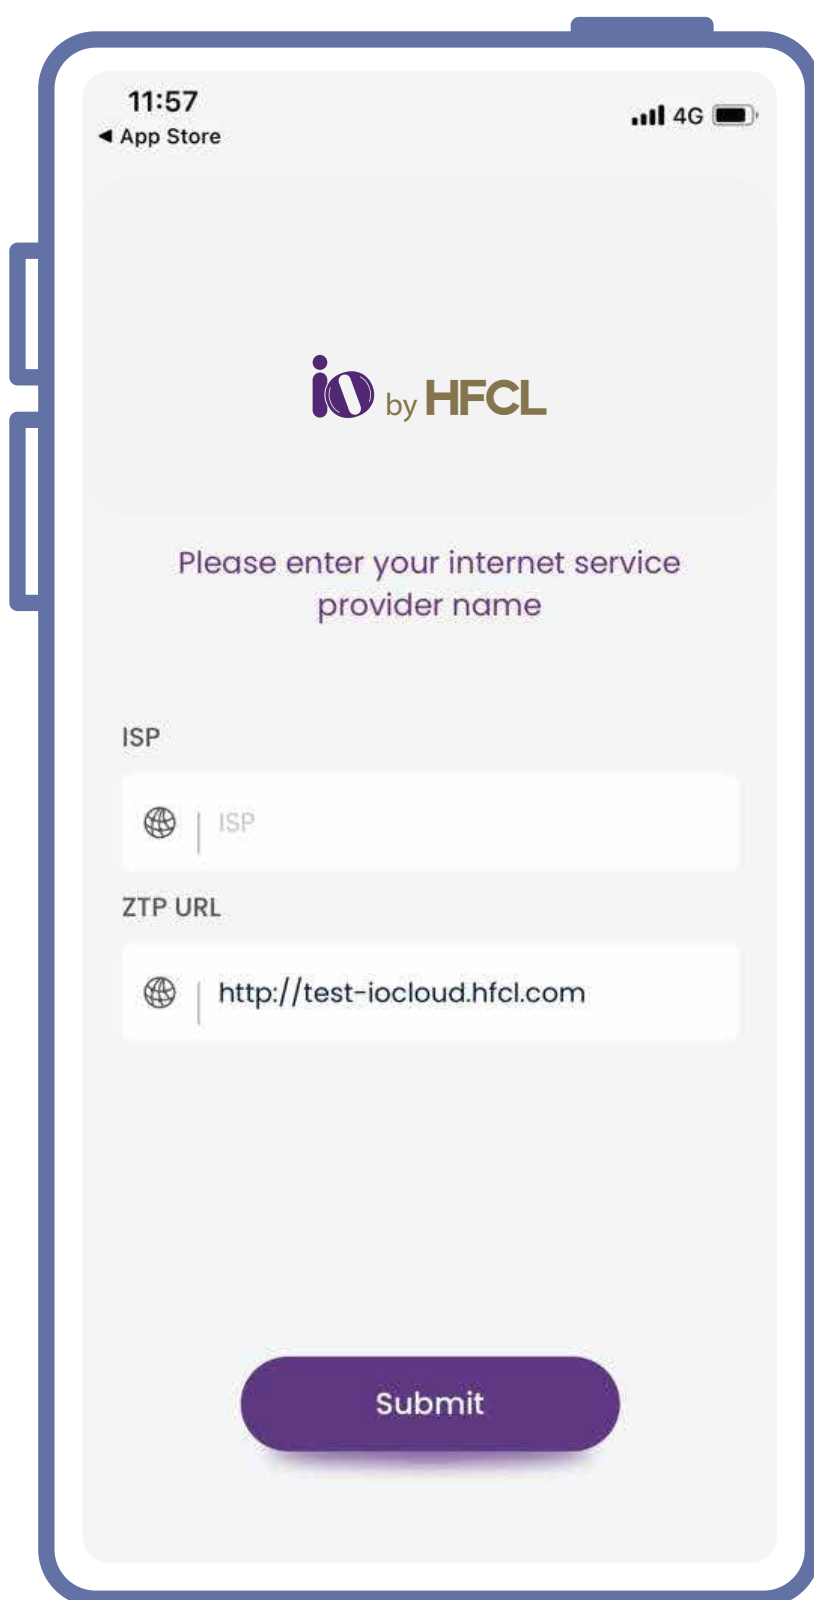


Step 1

Download the IO Weave mobile App from App Store/Google Play

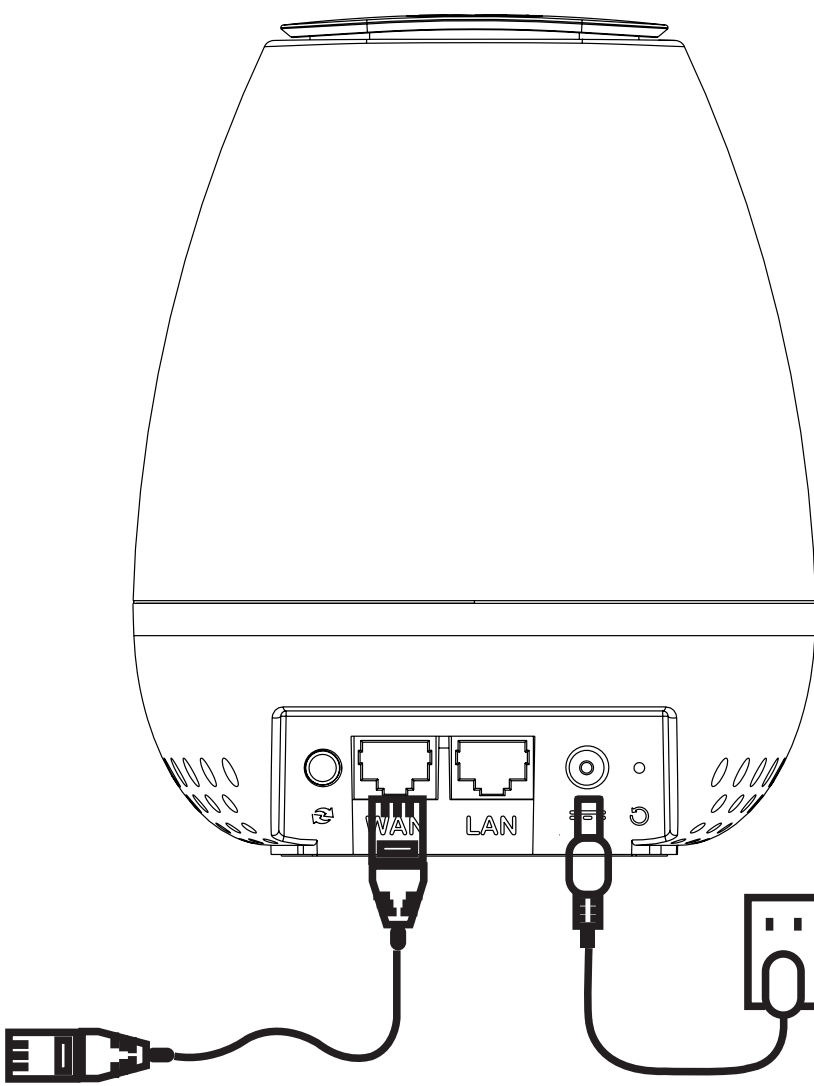

Step 2

Power on any one of the Weave device and connect the WAN/internet cable to the WAN port of the device

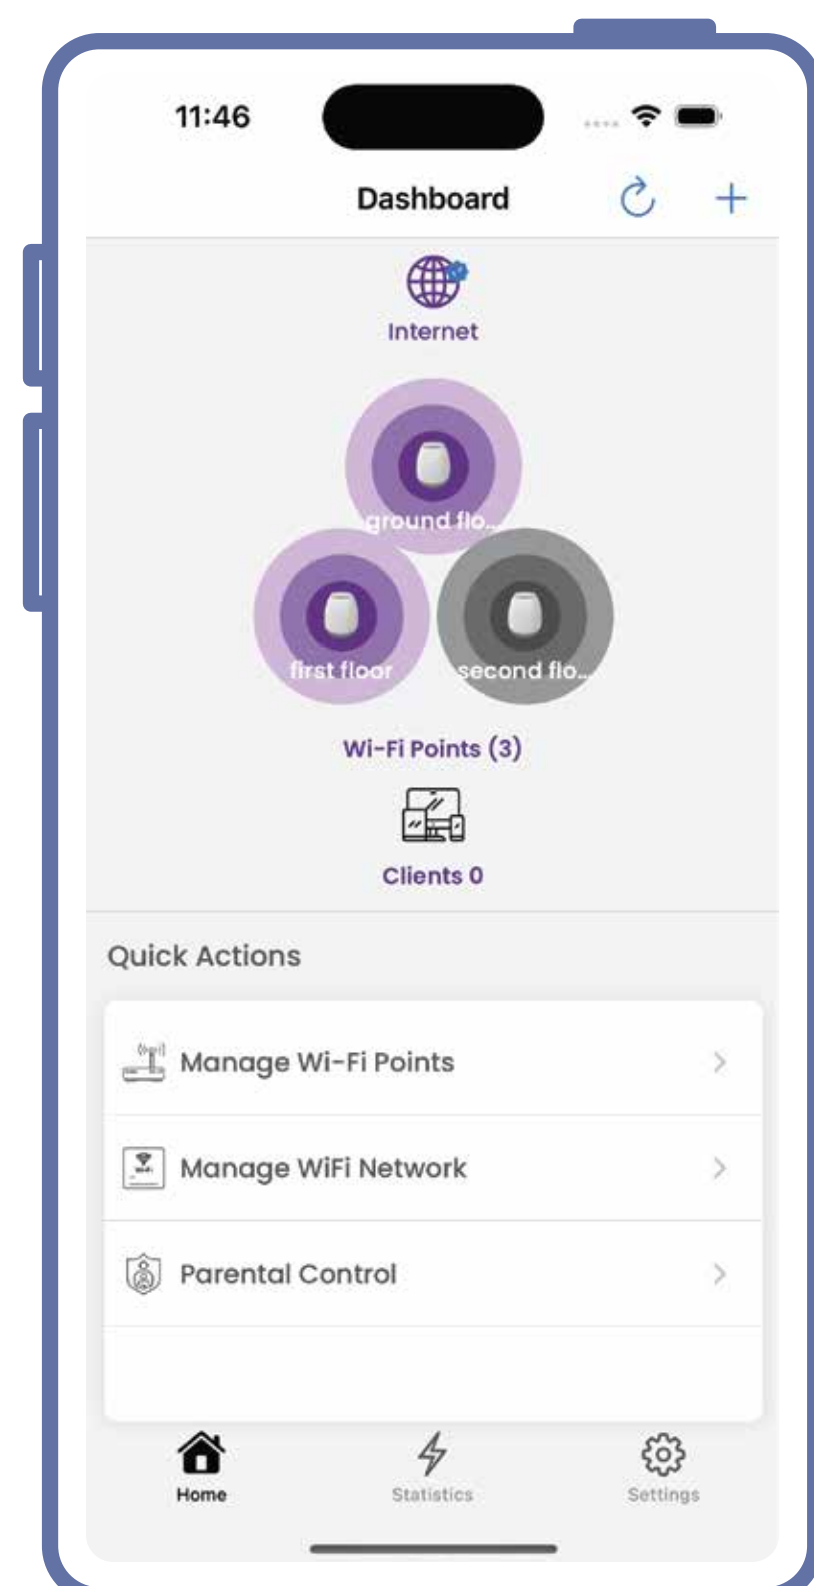

Step 3

Follow the instructions on the io Weave mobile App to setup Weave Mesh system

Contact Details



Toll Free Number India:
8792 701 100



Email:
iosupport@hfcl.com



Website:
hfcl.com | io.hfcl.com



Address:
8, Commercial Complex, Masjid Moth,
Greater Kailash-II, New Delhi- 110048

Part No: QSG-03-0001
Revision: B



HFCL Limited All Rights Reserved. HFCL and io by HFCL are trademarks or registered trademarks of HFCL Ltd. Specifications are subject to change without notice.